

**REALISTIC PROP WITH  
FLAME EFFECT!**



**FLAMING  
METALLIC  
PUMPKIN™**

**TRY  
ME**

**LED LIGHTS  
TIMER  
ACTIVATED**

**3AA** Batteries  
Required

(batteries included for  
demo purposes only.)

Please read instructions carefully before use.

Retain for future reference.

**OPERATING INSTRUCTIONS:**

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Carefully remove and discard "TRY ME" wire and packaging.
2. Use a small Phillips/crosshead screwdriver to open the item's battery compartment located on bottom of **FLAMING METALLIC PUMPKIN™**.
3. Place 3 brand new "AA" alkaline batteries into the battery compartment and replace battery compartment cover.
4. Place power switch, located on bottom of item, to the "TIMER" position to operate the item in "TIMER" mode. **FLAMING METALLIC PUMPKIN™** operates continuously for six hours. Operation pauses after six hours of continuous play and will automatically resume continuous operation 18 hours later.

**NOTE:** Keep switch in the "OFF" position when not in use.

**Includes:** (1) **FLAMING METALLIC PUMPKIN™** decoration.  
**INDOOR USE.** Display on level surface. All new materials: plastic.  
Surface washable only. Keep away from open flame.

Item # 56724. **FLAMING METALLIC PUMPKIN™** is a trademark of Tekky.

Copyright © 2025 Tekky. All Rights Reserved.

Manufactured for and distributed by: Tekky, Orland Park, IL 60467 USA  
MADE IN CHINA



**WARNING:**

Cancer and Reproductive Harm -  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



**WARNING:** CHOKING HAZARD -  
small parts. This item is not a toy. For  
decoration only. This product is intended  
for use by persons 15 years of age and  
older. Not intended for use by children 14  
years of age and younger.

[tekkydesign.com](http://tekkydesign.com)


**BATTERY  
INSTRUCTIONS:**

- Contains (3) AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
- Battery installation and removal should be performed by an adult.
- Batteries are harmful if swallowed. Keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.

**3AA**

**BATTERIES  
REQUIRED**

Batteries included for "try me" demo purposes only.

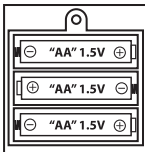

- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- DO NOT dispose of batteries in fire, they may leak or explode.

**10.23 IN**  
(26 CM)



**4.5V 1.5A DC  
Adapter Ready**

(Adapter not included,  
sold separately.)

**3AA**

**Batteries  
Required**

(Batteries included for  
demo purposes only.)

