

# CTHULHU WATCHER™


## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN


WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING. ESTIMATED ASSEMBLY TIME TEN MINUTES.

1. METAL BASE
2. CENTER POLES (6)
3. CONTROL BOX
4. HEAD AND BODY
5. ARM POLES
6. HAND
7. HAND AND LAMP
8. MODULE AND FRAME
9. WIRE MANAGEMENT CLIP
10. WING
11. WING
12. 6V 3A ADAPTER
13. SANDBAGS (3)
14. SNAP LOCK REMOVAL TOOL


### PARTS

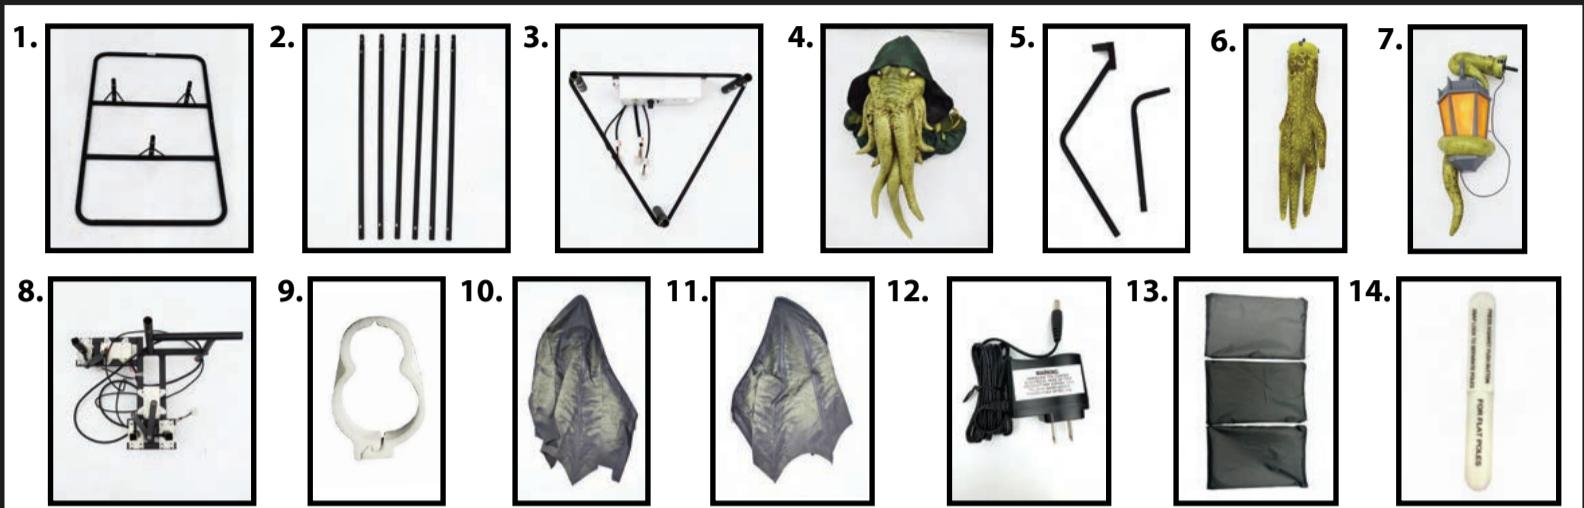

### ASSEMBLY

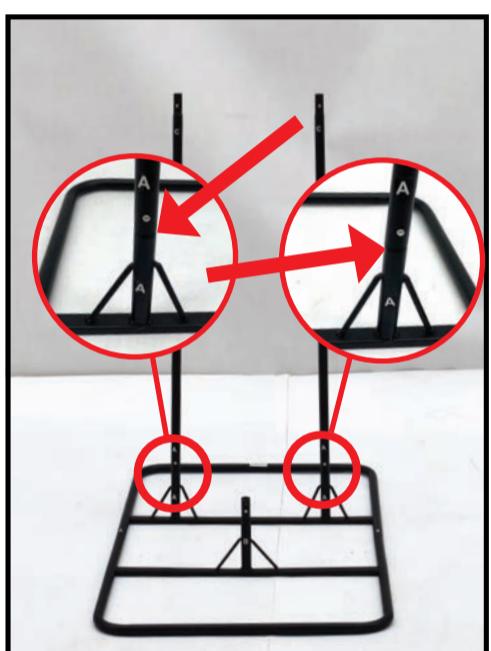

1. Snap lock the CENTER POLES labeled A to the METAL BASE.  
MATCH A TO A

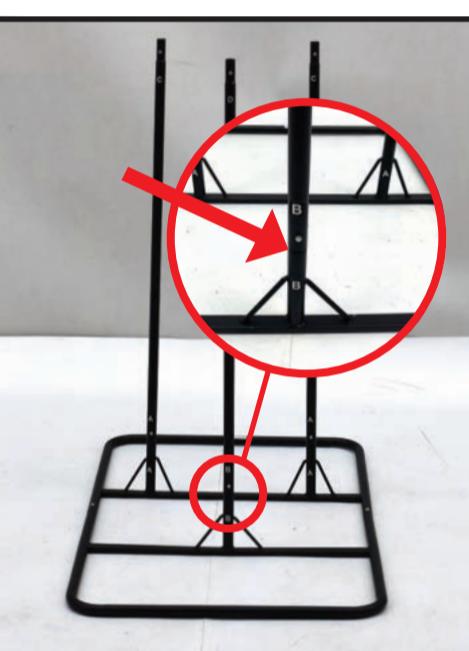

2. Snap lock the CENTER POLE labeled B to the METAL BASE.  
MATCH B TO B



3. Slide the CONTROL BOX labeled C, C, and D to the CENTER POLES.  
MATCH C TO C, MATCH C TO C  
MATCH D TO D



4. Slide the CENTER POLES labeled E, E, and F to the CONTROL BOX.  
MATCH E TO E, MATCH E TO E  
MATCH F TO F



5. Snap lock the MODULE AND FRAME labeled G, G, and H to the CENTER POLES.  
MATCH G TO G, MATCH G TO G  
MATCH H TO H



6. Snap lock the HEAD AND BODY labeled I to the MODULE AND FRAME.  
MATCH I TO I



7. Snap lock the right ARM POLE labeled J to the MODULE AND FRAME.  
MATCH J TO J



8. Snap lock the left ARM POLE labeled K to the MODULE AND FRAME.  
MATCH K TO K

# ASSEMBLY



9. Snap lock the left ARM AND LAMP labeled L to the left ARM POLE.  
MATCH L TO L




10. Snap lock the right HAND labeled M to the right ARM POLE.  
MATCH M TO M




11. Open the costume on the BODY and snap lock the left WING labeled N to the MODULE AND FRAME.  
MATCH N TO N




12. Open the costume on the BODY and snap lock the right WING labeled O to the MODULE AND FRAME.  
MATCH O TO O

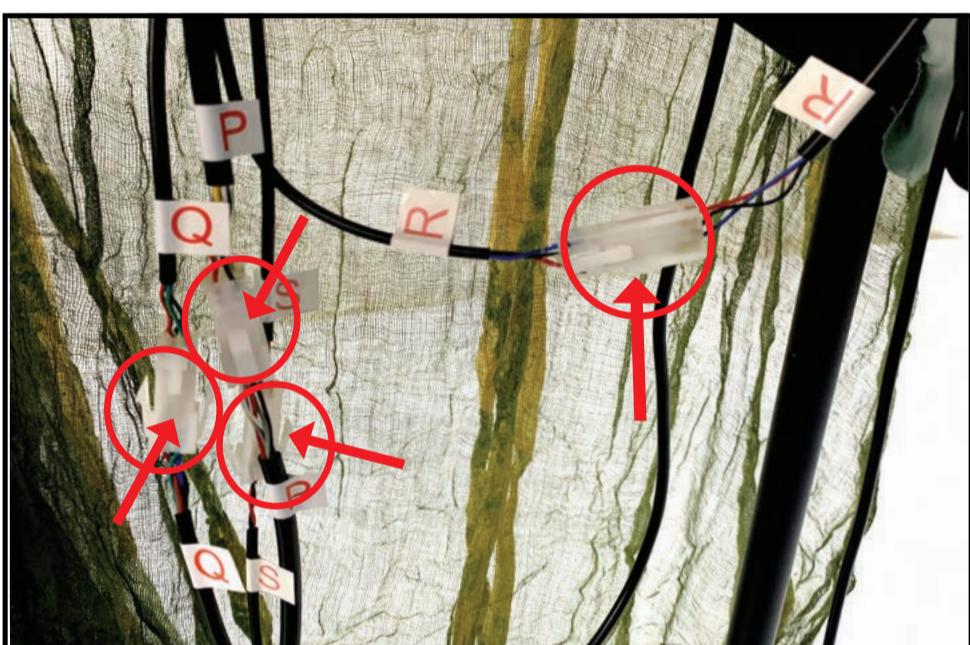


13. Attach the wires to the CONTROL BOX.  
MATCH P TO P (Hand movement),  
MATCH Q TO Q (Wing movement),  
MATCH R TO R (Human sensor),  
MATCH S TO S (Light up eyes)

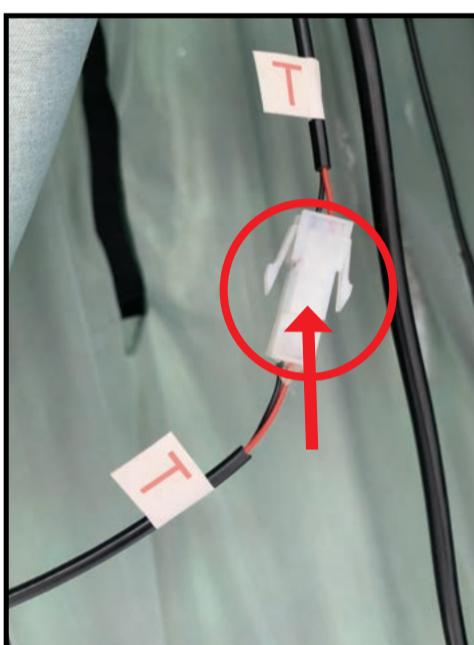


14. Attach the wire to the CONTROL BOX.  
MATCH T TO T (Light up lantern)

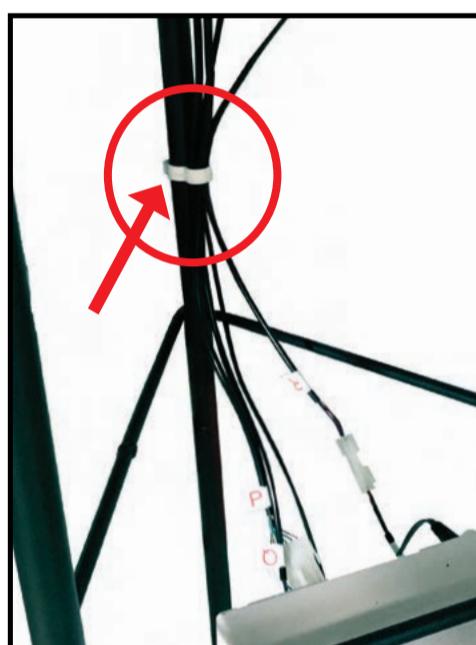

15. Attach the wires on to the CENTER POLES with the WIRE MANAGEMENT CLIP.

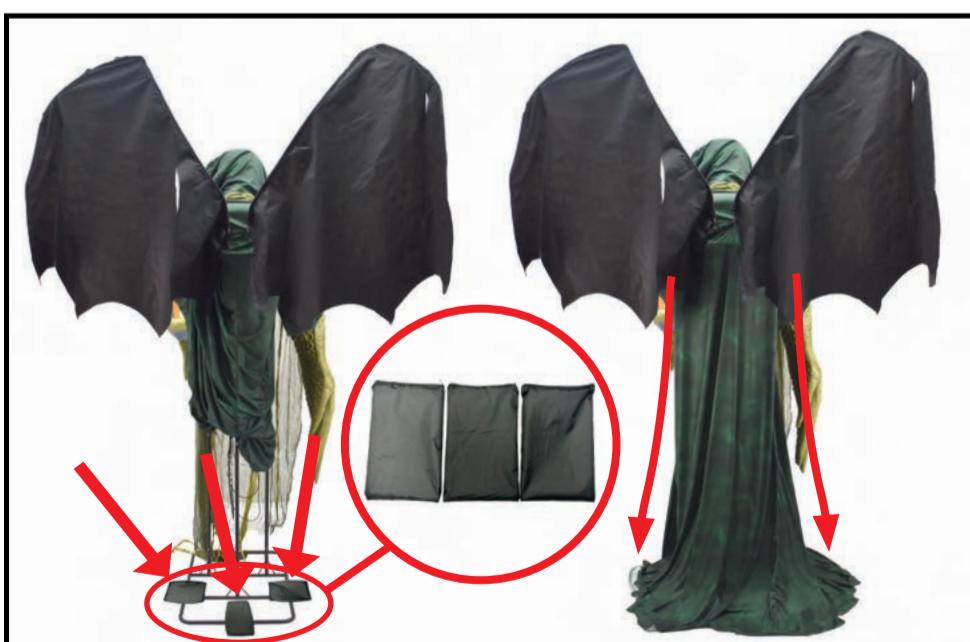

15. Fill SANDBAGS (3) with sand to capacity and place on METAL BASE for stability. Adjust the costume on the BODY.

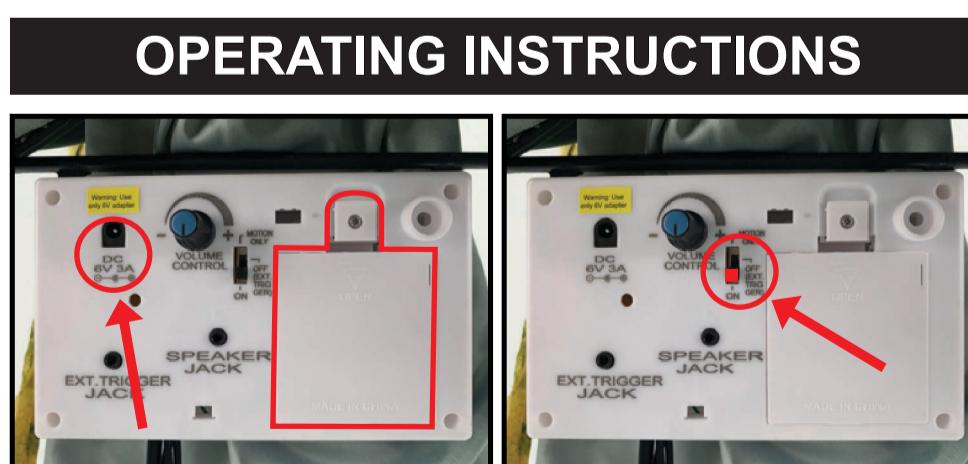

Plug in the 6V 3A ADAPTER (included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.



Move the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate the item.

Turn the item to the OFF position when not in use.

## OPTIONAL EXT. TRIGGER SET UP

EXT. TRIGGER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from EXT. TRIGGER into the jack labeled EXT. TRIGGER JACK on the CONTROL BOX.
2. Place the switch in the EXT. TRIGGER position to enable EXT. TRIGGER activation.
3. Step on the EXT. TRIGGER to activate the scary sequence!

\* Ext. Triggers are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)



## OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



## BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.

Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated.

Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the item before being charged.

Non-rechargeable batteries are not to be recharged.

The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children ages 14 years and younger.**

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.



**TEKKY**

visit us at [tekkydesign.com](http://tekkydesign.com)

Requires 6V 3A ADAPTER (included)  
or 4AA batteries (not included)

ALL NEW MATERIALS:  
METAL, FOAM, PLASTIC, POLYESTER  
Surface washable only.

CTHULHU WATCHER™  
is a trademark of Tekky.  
Copyright © 2024 Tekky.  
All Rights Reserved.  
MADE IN CHINA



**SMART PHONE SCAN**  
**SETUP VIDEO**

