

WEDNESDAY

WEDNESDAY © 2022 MGM Television.
Entertainment Inc. WEDNESDAY is a trademark
of Tee & Charles Addams Foundation.
© 2024 Metro-Goldwyn-Mayer Studios Inc.
All Rights Reserved.

TEKKY and the logo design are trademarks of JCW
Investments, Inc., d/b/a Tekky, and used under license.
TekkyDesign.com

ITEM #5746903
MODEL #61189

WEDNESDAY 5-FT ANIMATED RAVE'N DANCE WEDNESDAY

ATTACH YOUR RECEIPT HERE



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go
to www.tekkydesign.com for assistance.

TABLE OF CONTENTS

Safety Information/Preparation	2
Package Contents	3-4
Assembly Instructions	5- 15
Operating Instructions	16
Care and Maintenance/Troubleshooting	17



SAFETY INFORMATION

WARNING

- **Warning: Risk of injury to persons. Read and understand instruction manual before use.**
- Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
- Do not turn item on until you have completely finished assembly.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place weight on item while in operation unless on the metal base.

PREPARATION

ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes

PACKAGE CONTENTS

1.



2.



3.



4.



5.



6.



7.



8.



PART	DESCRIPTION	QUANTITY
1.	Legs	2
2.	Metal Stand	1
3.	Arms	2
4.	Lower Leg Poles	2
5.	Upper poles, control box and adapter	2
6.	Dress	1
7.	Waist bracket	1
8.	Body and Head	1



SAFETY INFORMATION

WARNING

- **Warning: Risk of injury to persons. Read and understand instruction manual before use.**
- **Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.**
- Do not turn item on until you have completely finished assembly.
- Intended for indoor use only.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place weight on item while in operation unless on the metal base.

PREPARATION

ADULT ASSEMBLY REQUIRED


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 12 minutes


ASSEMBLY INSTRUCTIONS

1. Insert and snap lock the LOWER LEG POLES into the METAL BASE.

(Match A to A)

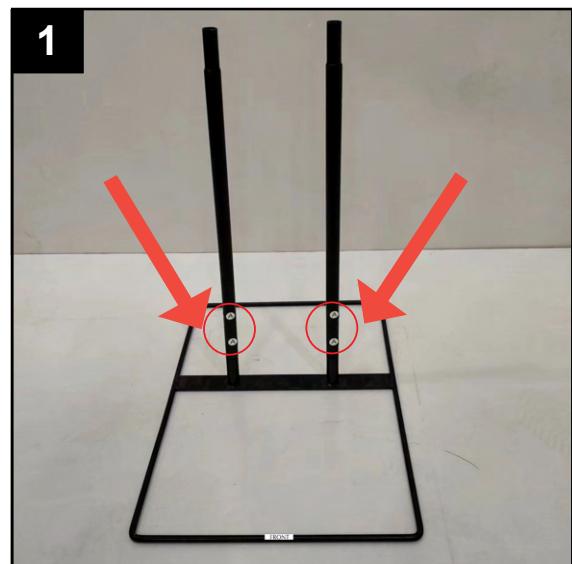

2. Slide both LEGS labeled LEFT and RIGHT over the LOWER LEG POLES with the front of the shoes facing the front label on the METAL BASE.

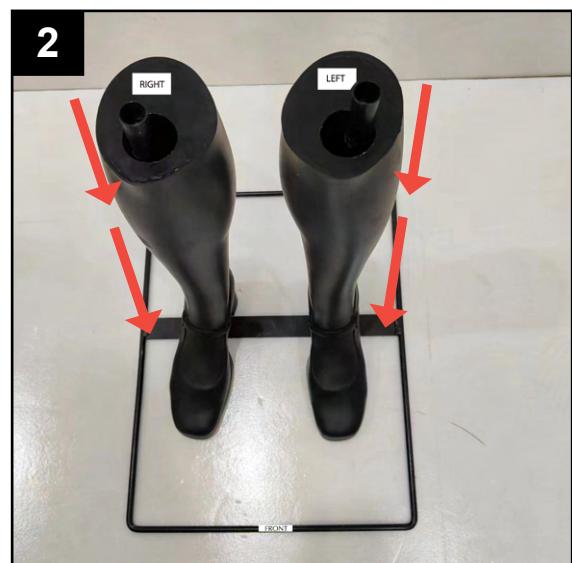


3. Insert and snap lock the UPPER POLE into the LOWER LEG POLE.

(Match B to B)

Insert and snap lock the UPPER POLE, CONTROL BOX AND ADAPTER into the LOWER LEG POLE.


(Match C to C)

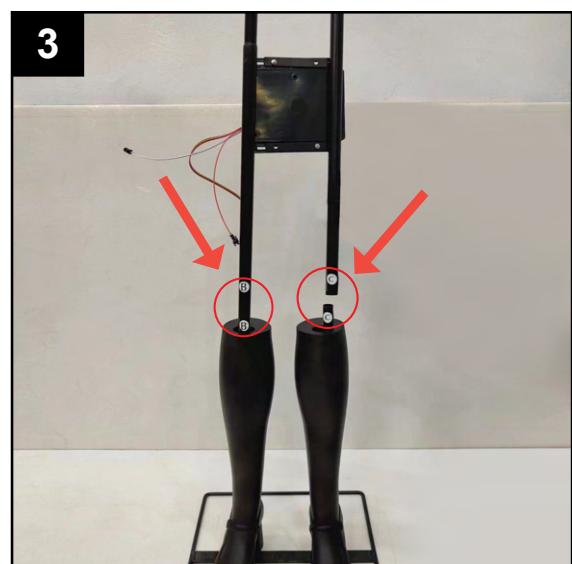


ASSEMBLY INSTRUCTIONS

4. Insert and snap lock WAIST BRACKET to UPPER POLE CONTROL BOX AND ADAPTER.

(Match D to D) and (Match E to E)

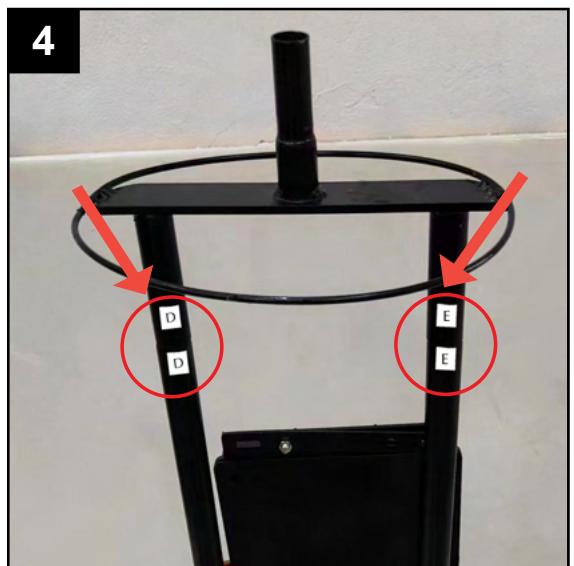


5. Slide the DRESS over assembled WAIST BRACKET and proceed to the next step.

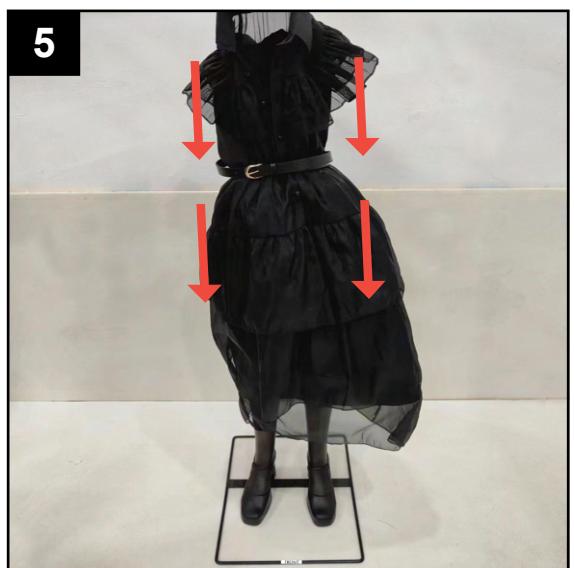

6. Snap lock the BODY AND HEAD to the WAIST BRACKET.


(Match F to F)

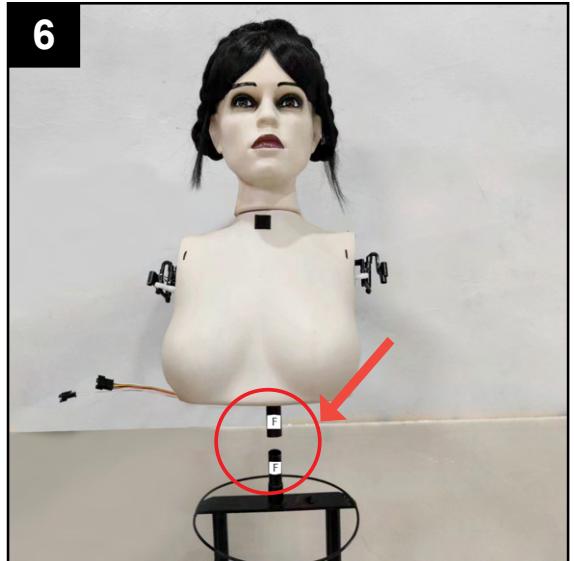

ASSEMBLY INSTRUCTIONS

7. Connect the wires from the BODY AND HEAD to both the wires located on the CONTROL BOX.

(Connect G to G) (Connect H to H)
and (Connect I to I)

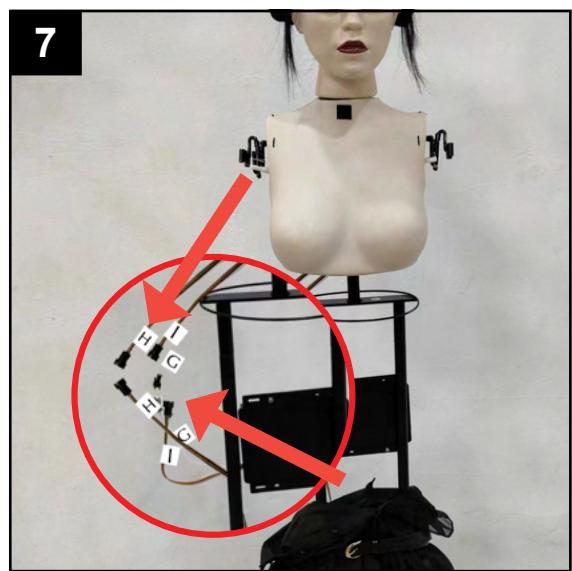

8. Pull the DRESS up and over the shoulders.

Fasten the DRESS buttons and secure the DRESS collar to the neck with hook and loop fastener.



FASTEN BUTTONS AND HOOK AND LOOP



9. Move the DRESS sleeves upwards and insert posts on RIGHT ARM into the right shoulder on the HEAD AND BODY.


(Match J to J)



ASSEMBLY INSTRUCTIONS

10. Move the DRESS sleeves upwards and insert posts on RIGHT ARM into the right shoulder on the HEAD AND BODY.

(Match K to K)

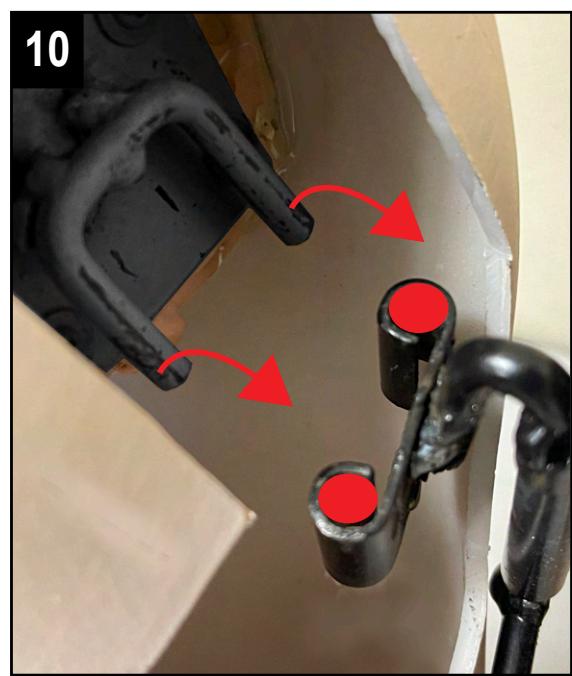

11. Check that the 5.9V 2A ADAPTER located on the CONTROL BOX is fully secure by twisting it tight. Do not over tighten.



OPERATING INSTRUCTIONS

1. Move the switch to the ON position. Make a loud sound (clap) or move in front of the item to activate it.

Adjust volume control as needed.

Turn item off when not in use.



2. Adjust the dress and position item as seen in photo making sure the human sensor is not blocked.



OPTIONAL DEMO SET UP

**FOOTPAD IS NOT INCLUDED.
MUST BE PURCHASED SEPARATELY.**

1. Insert the cable from optional footpad into the jack labeled DEMO JACK on the CONTROL BOX.
2. Place the switch in the DEMO position to enable DEMO activation.
3. Step on the FOOTPAD to activate the scary sequence!



CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.
- REMOVE BATTERIES WHEN STORING ITEM FOR LONG PERIODS OF TIME.
- DESIGNED FOR SEASONAL OPERATION ONLY.
- NOT INTENDED FOR CONSTANT OR LONG-TERM USE.
- PROPER STORAGE AND USE ARE ESSENTIAL TO THIS ITEM'S LONGEVITY.
- INTENDED FOR INDOOR USE ONLY.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	<ul style="list-style-type: none">• 5.9V 2A adapter is not plugged in.• Switch on control box is not in the ON position.• Human sensor on the dress may be blocked.	<ul style="list-style-type: none">• Check 5.9V 2A adapter is plugged in and securely inserted into the control box.• Move switch to ON position.• Move any obstructions away from the dress.
You only hear item sound but no item activation.	<ul style="list-style-type: none">• Control box wires are not connected	<ul style="list-style-type: none">• Check that wires labeled F, G, H are securely connected.
Item has no sound while operating.	<ul style="list-style-type: none">• Volume knob is turned all the way down.	<ul style="list-style-type: none">• Adjust volume knob to desired volume.

FCC REGULATION

FCC STATEMENT

FCC RULES: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.