

# Haunted Hill Farm®

Thank you for choosing Haunted Hill Farm!  
If you have any questions, concerns or suggestions,  
please contact us directly.

**Boo@HauntedHillFarm.com** (Anytime)

**1-888-840-4559**

9AM-9PM EST Monday-Friday

9AM-5PM EST Saturday-Sunday

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

If you picked up your product up at a retail store, please also advise the name, city and state of the store where you received your product.

**Please do not return this item to the retailer.**

See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

**[www.HauntedHillFarm.com](http://www.HauntedHillFarm.com)**

**Follow us on social!**

**Facebook & Instagram: [@officialhauntedhillfarm](https://www.facebook.com/officialhauntedhillfarm)**

**YouTube & TikTok: [@hauntedhillfarm](https://www.tiktok.com/@hauntedhillfarm)**

Please follow the step by step guide and enjoy SOUL HARVESTING WITCH™!

## HHSOULHARVSTR-1FLSA



The model number of your item is printed on the side of your carton.  
Always use this number to identify your item.

Thank you for your purchase of this quality Halloween decor. With proper use and care, your Halloween decor will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your item, or you have any questions, **DO NOT** return it to the place of purchase. Please call our toll-free number: **1-888-840-4559** and a customer service representative will assist you. Enjoy your Holiday!

# PARTS

1.




2.



3.




4.

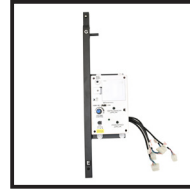

5.




6.

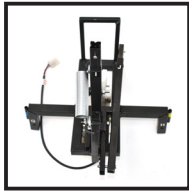

7.



8.

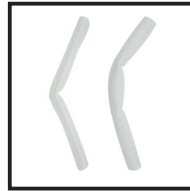


9.



10.



11.

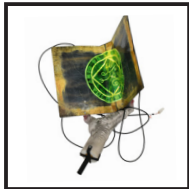

12.



13.



14.



15.



16.



17.



18.



19.



20.



1. FRONT METAL STAND
2. BACK METAL STAND
3. LOWER POLES (2)
4. MIDDLE POLE WITH CONTROL BOX
5. MIDDLE POLE
6. WAIST FRAME WITH MODULE
7. UPPER SUPPORT POLES

8. LEG WIRES WITH FOAM (2)
9. REAR BLISTER
10. HEAD WITH BODY, RIGHT ARM POLE, & LEFT ARM POLE
11. LEFT HAND WITH BOOK
12. RIGHT HAND
13. BOY'S LEG POLES WITH FOAM (2)

14. SHOES (2)
15. PANTS WITH WAIST RING
16. BOY'S WAIST FRAME
17. BOY'S HEAD & BODY WITH FOG TUBE
18. 6V 2A DC ADAPTER
19. FOG CORD & FOG ADAPTER
20. FOG CLAMP

**BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX.  
IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT.  
CONTACT CUSTOMER SERVICE AT BOO@HAUNTEDHILLFARM.COM,  
OR BY PHONE 9AM-9PM EST MONDAY-FRIDAY,  
9AM-5PM EST SATURDAY-SUNDAY AT 1-888-840-4559.**

### **CARE AND STORAGE INSTRUCTIONS**

When the product is not in use, store in its original packing after it is completely dry.

Keep away from heat.

Please read all instructions carefully before assembling.

Save this instruction sheet for future reference.

### **WARNING**

This item is not a toy and should be used for decoration only.

This item contains small parts that can be a choking hazard.

Keep all plastic and wire parts away from children. Recommended for ages 15 and up.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching letters.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.  
Keep all away from the adapter, as it heats up during operation.
4. This item contains Polyvinyl Chloride (PVC).
5. Colors, style and contents may vary slightly from those shown on the package.

Requires 4AA batteries (not included)  
or 6V 2A Adapter (included).


ALL NEW MATERIALS:  
PLASTIC, FABRIC, METAL.

POLYPROPYLENE FOAM.

Surface washable only.




# ASSEMBLY

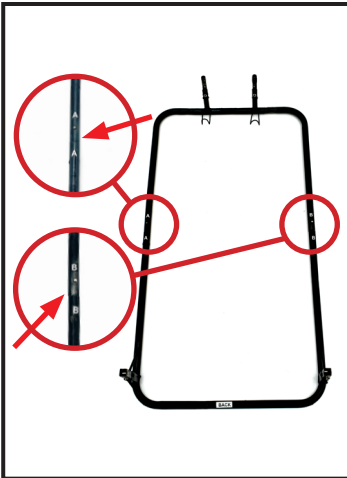

1. Snap lock the FRONT METAL STAND to the BACK METAL STAND.

(MATCH A TO A)  
(MATCH B TO B)

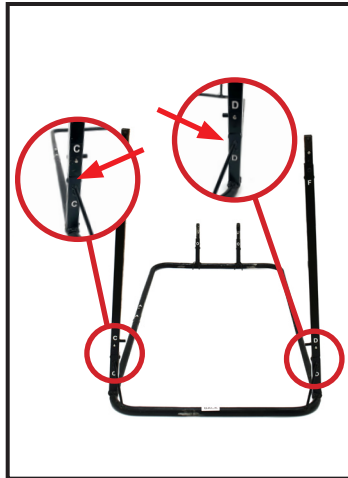


2. Snap lock the LOWER POLES to the BACK METAL STAND.

(MATCH C TO C)  
(MATCH D TO D)



3. Snap lock the MIDDLE POLE WITH CONTROL BOX to the LOWER POLE.

(MATCH E TO E)

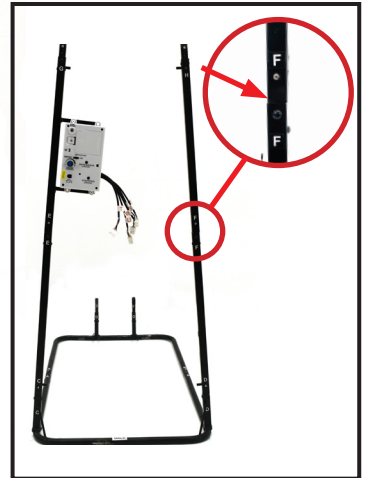


4. Snap lock the MIDDLE POLE to the LOWER POLE.

(MATCH F TO F)



5. Snap lock the WAIST FRAME WITH MODULE to the MIDDLE POLES.

(MATCH G TO G)  
(MATCH H TO H)

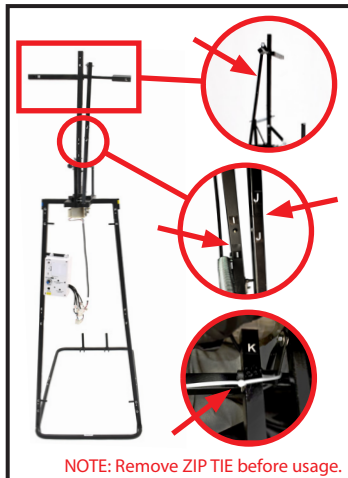


6. Snap lock the UPPER SUPPORT POLES to the WAIST FRAME WITH MODULE.

(MATCH I TO I)  
(MATCH J TO J)  
Ensure the arm linkage is rotated so the "J" pole is behind the spine pole labeled "I" and "K".

NOTE: Remove ZIP TIE before usage.



7. Insert the LEG WIRES WITH FOAM into the MIDDLE and LOWER POLES, with the knees facing forward.

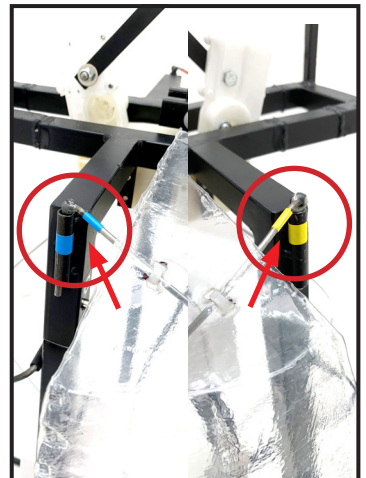

8. Insert the REAR BLISTER posts into the WAIST FRAME WITH MODULE.

(MATCH BLUE TO BLUE)  
(MATCH YELLOW TO YELLOW)

# ASSEMBLY



9. Insert and snap lock the HEAD WITH BODY, RIGHT ARM POLE, & LEFT ARM POLE over the UPPER SUPPORT POLES.  
(MATCH K TO K)



10. Insert and snap lock the RIGHT ARM POLE to the HEAD WITH BODY.  
(MATCH L TO L)



11. Insert and snap lock the LEFT ARM POLE to the HEAD WITH BODY.  
(MATCH M TO M)



12. Insert and snap lock the RIGHT HAND to RIGHT ARM POLE. Attach the hook and loop from the sleeve to the wrist.  
(MATCH N TO N)



13. Insert and snap lock the LEFT HAND WITH BOOK to LEFT ARM POLE. Feed the wire from the LEFT HAND WITH BOOK up the sleeve. Attach the hook and loop from the sleeve to the wrist.  
(MATCH O TO O)



14. Slide the SHOES over the FRONT METAL STAND.  
Insert and snap lock the BOY'S LEG POLES WITH FOAM to FRONT METAL STAND.  
(MATCH P TO P)




15. Slide the PANTS WITH WAIST FRAME over the BOY'S LEG POLES WITH FOAM.  
(The hook and loop at the bottom of the PANTS WITH WAIST FRAME should be facing the back side of the shoes.)



16. Insert and snap lock the BOY'S WAIST FRAME to the BOY'S LEG POLES WITH FOAM.  
(MATCH Q TO Q).



# ASSEMBLY

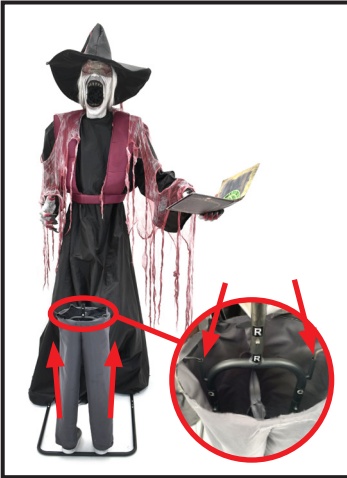


17. Insert the PANTS WITH WAIST RING into the two posts located on the BOY'S WAIST FRAME.



18. Insert and snap lock the BOY'S HEAD & BODY to BOY'S WAIST FRAME.

(MATCH R TO R)

Attach the hook and loop from the PANTS to the boy's SHOES.

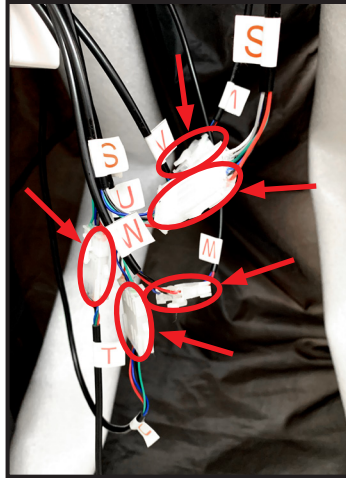

19. Connect wire from the MODULE to the CONTROL BOX. (MATCH S TO S - Body Movement)

Connect wire from the LEFT HAND AND BOOK to the CONTROL BOX. (MATCH T TO T - Book LED)

Connect wire from the Witch's Fan and LED to the CONTROL BOX. (MATCH U TO U - Witch's Fan LED)

Connect wire from the Boy to the CONTROL BOX. (MATCH V TO V - Boy's Head)

Connect wire from the Human Sensor to the CONTROL BOX. (MATCH W TO W - Human Sensor)



20. Adjust the DRESS around the METAL STAND.

**WARNING:**  
Ensure all fabric is free from under the METAL STAND.

# FOG MACHINE SETUP

Please follow steps 1 through 20 on the assembly instructions before beginning FOG MACHINE SETUP:


1. Your fog machine (400 or 1000 watt) can be used in conjunction with SOUL HARVESTING WITCH™.
2. Do not use with any other fog machine.
3. FOG MACHINE IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.
4. Manufacturer does not guarantee the performance of the fog machine.
5. Make sure to use the supplied fog machine components when hooking up to the fog machine, or damage could occur.
6. MAKE SURE THE SOUL HARVESTING WITCH™ IS SET TO THE "OFF" POSITION AND THAT YOUR FOG MACHINE IS TURNED OFF WHEN NOT IN USE.

Fog Clamp - PATENT: <https://tekkydesign.com/pages/terms-conditions.php>

## FOG MACHINE ASSEMBLY INSTRUCTIONS:



1. FOG HOSE will slide onto the FOG CLAMP and secure in place.  
(See Illustration A)

Depress the lever arms of the FOG CLAMP and attach to the fog machine nozzle.  
(See Illustration B)

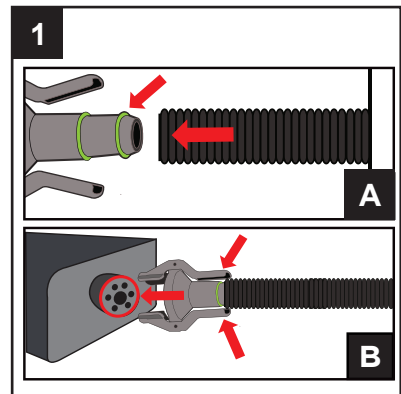

2. Plug the FOG CORD into your fog machine.  
If the FOG CORD does not fit, see illustration 2a.


- 2a. Plug the FOG CORD into the FOG CORD ADAPTER. Plug FOG CORD ADAPTER into your fog machine.

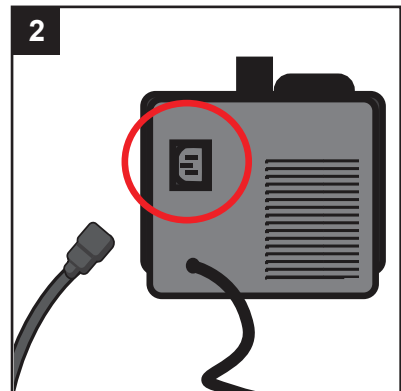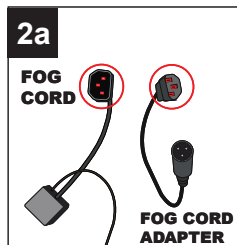

3. Plug the other end of the FOG CORD into the label jack X on the CONTROL BOX. ( MATCH X TO X ).

Make sure your fog machine is heated up properly, turn you fog machine ON, and then turn the Soul Harvesting Witch™ switch to the "ON" position.

Make a loud sound (clap) or move in front of the left side. if no fog appears, press the relay switch on the CONTROL BOX.

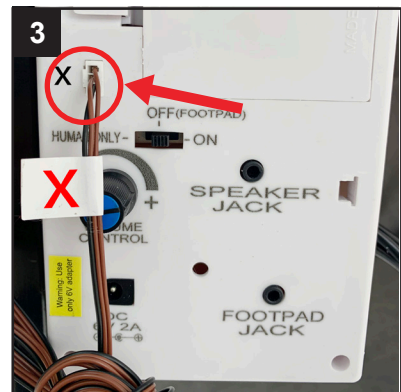




# OPERATING INSTRUCTIONS



1. Reach inside the fabric frame cover and connect 6V 2A DC ADAPTER (included).

OR

Insert 4 AA alkaline batteries (not included) into the battery compartment located on the CONTROL BOX.

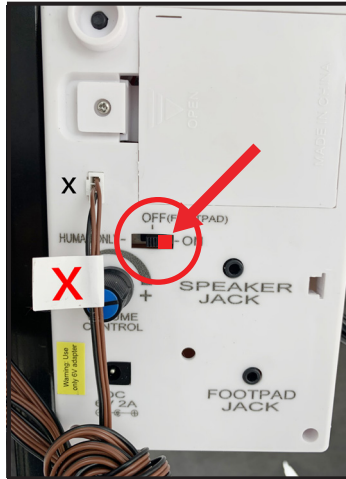

2. Turn the switch to the ON position to activate the item. Make a loud sound (clap) to activate.

OR


Move the switch to the HUMAN ONLY position. Move in front of the item to activate. Turn the item OFF when not in use.

## OPTIONAL DEMO SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD JACK on the CONTROL BOX.
2. Place the switch on the CONTROL BOX into the OFF (FOOTPAD) position to enable footpad activation.
3. Step on footpad to activate the scary sequence.


Footpads are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

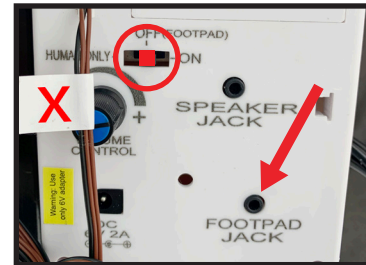

## OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use EXTERNAL SPEAKER knob to control volume level.

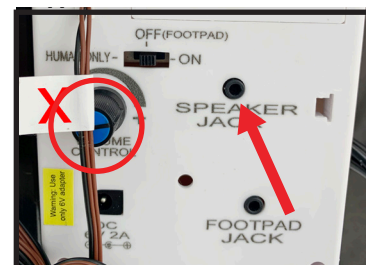




## Warnings

- This product is for decoration only and is not a toy. Small parts and choking hazard. Use caution with children under the age of 15.
- Do not position the decoration near candles, sources of heat, or in direct sunlight.
- The decoration cannot be connected to the power supply directly.
- Decoration should be on a level, stable surface to prevent it from falling over.
- This product is fragile and should be assembled with care.
- Surface washable only.
- Please follow the steps and requirements specified in the instruction to ensure safety and reliability during the installation.

### Battery Diagram

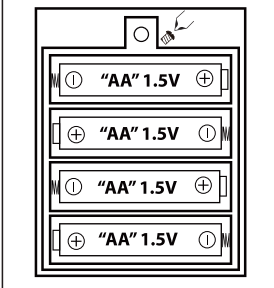

### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.**

### WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.  
STAY CLEAR OF ITEM WHILE OPERATING.  
DO NOT PLACE ITEM ON UNEVEN GROUND.  
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

**Storage tips:** We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.



# 1-YEAR LIMITED WARRANTY

## "Limited" Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

**Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.**

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

**Certain items are not covered by this warranty. These include, but are not limited to the following:**

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items may be charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

**THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.**

**Boo@HauntedHillFarm.com**