


elf stack

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 4 MINUTES.

PARTS

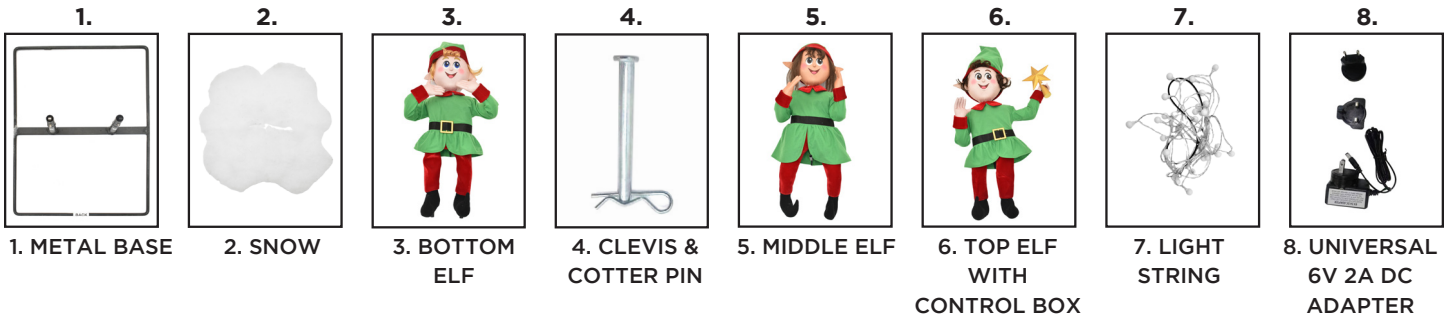


ASSEMBLY

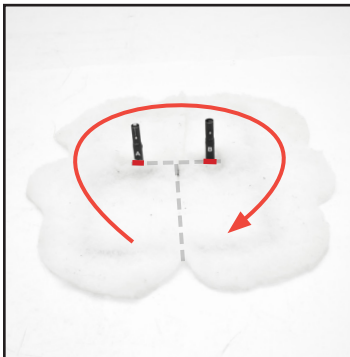

1. Adjust the SNOW around the METAL BASE'S metal posts with the SNOW slit facing towards the back of the METAL BASE.



2. Insert and snap lock the BOTTOM ELF into the METAL BASE. (Match A to A) (Match B to B)

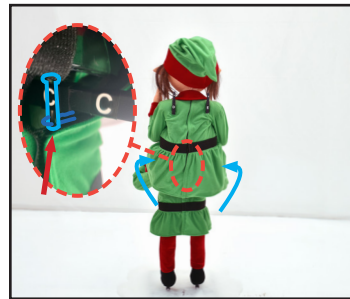

3. Through the BOTTOM ELF'S back, secure the MIDDLE ELF to the BOTTOM ELF with the CLEVIS & COTTER PIN. (Match C to C) Adjust the MIDDLE ELF'S legs over the BOTTOM ELF'S shoulders. Adjust the MIDDLE ELF'S skirt to lay flat.



4. Insert the TOP ELF WITH CONTROL BOX into the MIDDLE ELF'S back posts. (Match D to D) (Match E to E) Feed the LIGHT STRING'S black cable down the left sleeve of the TOP ELF.




5. Connect the wires located on the CONTROL BOX. (Match F to F - Human Sensor) (Match G to G - LED Star) (Match H to H - Light String)




6. Hook and loop the back of the TOP ELF WITH CONTROL BOX'S shirt shut. Unravel the LIGHT STRING and adjust it onto the assembled item as shown (marked in blue) in the diagram.

OPERATING INSTRUCTIONS

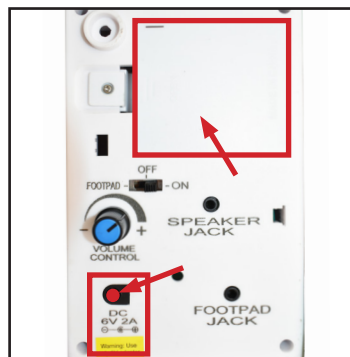

1. Through the back of the TOP ELF'S shirt, insert 4 AA batteries (not included) into the CONTROL BOX. OR Insert the 6V 2A DC ADAPTER (included) into the CONTROL BOX.

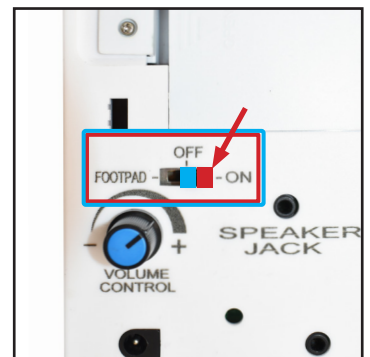

2. Move the switch located on the CONTROL BOX to the ON position (marked in red). Move in front of the item to activate it. Move the switch to the OFF position (marked in blue) when item is not in use.

OPTIONAL FOOTPAD SETUP

OPTIONAL FOOTPAD SETUP


FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from the optional footpad into the jack located on the CONTROL BOX labeled FOOTPAD JACK.
2. Place the power switch to the FOOTPAD position to enable footpad activation.
3. Step on the footpad to activate the jolly sequence!

* Footpads are sold separately and can be purchased at www.tekkyaccessories.com.



Battery Diagram

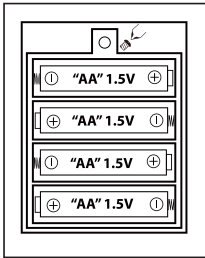

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING!
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION UNLESS ON METAL BASE.



Visit us at tekkydesign.com
Requires 4 AA Batteries
(not included) or
6V 2A DC ADAPTER (included)

ALL NEW MATERIAL ONLY:
METAL, PLASTIC, FABRIC,
POLYPROPYLENE FOAM,
POLYESTER WADDING.
Surface washable only.
93145

Elf Stack™
is a trademark of Tekky.
Copyright ©2025 Tekky.
All Rights Reserved.

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkydesign.com for assistance.



**SMART PHONE SCAN
SETUP VIDEO**

