


EXORCISM EMILY BROKEN DOLL ANIMATRONIC™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 7 MINUTES.

PARTS

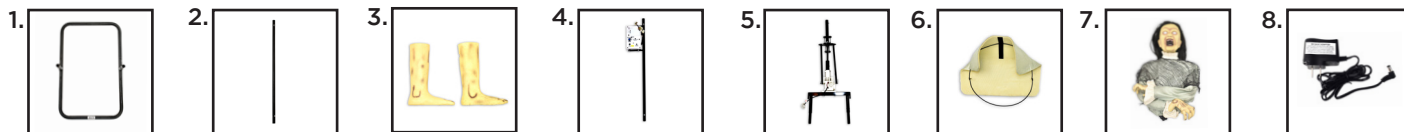


1. METAL BASE
2. LEFT LEG POLE

3. LEGS AND FEET (2)
4. RIGHT LEG POLE WITH
CONTROL BOX


5. FRAME WITH MODULE
6. WAIST RING WITH
FABRIC COVER

7. HEAD & BODY
8. 6V 2A DC ADAPTER


ASSEMBLY

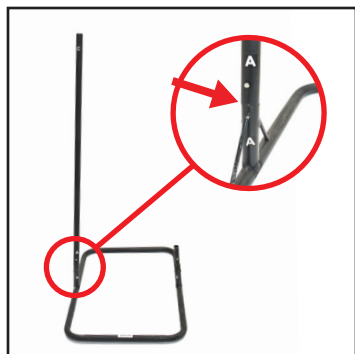


1. Insert and snap lock
LEFT LEG POLE to
METAL BASE.
(MATCH A TO A)

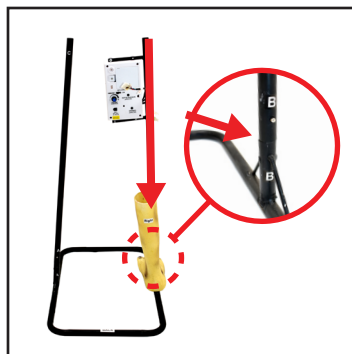

2. Slide RIGHT LEG
POLE WITH CONTROL
BOX through right LEG
AND FOOT. Insert and
snap lock into the
METAL BASE.
(MATCH B TO B)

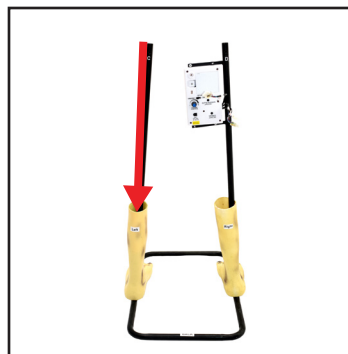

3. Slide the left LEG AND
FOOT down the LEFT
LEG POLE to the
METAL BASE.

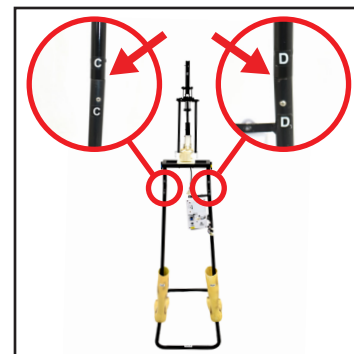


4. Insert and snap lock
FRAME WITH MODULE
to LEG POLES.
(MATCH C TO C)
(MATCH D TO D)



5. Insert the WAIST RING
WITH FABRIC COVER
into the FRAME
WITH MODULE.
(MATCH YELLOW TO
YELLOW)
(MATCH BLUE TO BLUE)




6. Insert and snap lock
the HEAD & BODY to
FRAME WITH MODULE.
(MATCH E TO E)

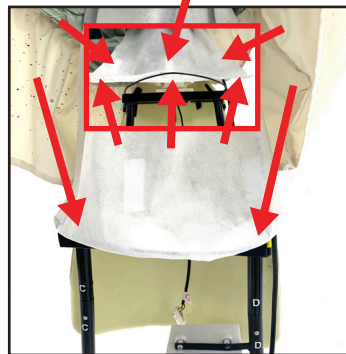


7. Hook and loop the inner
dress to the
WAIST RING.

ASSEMBLY

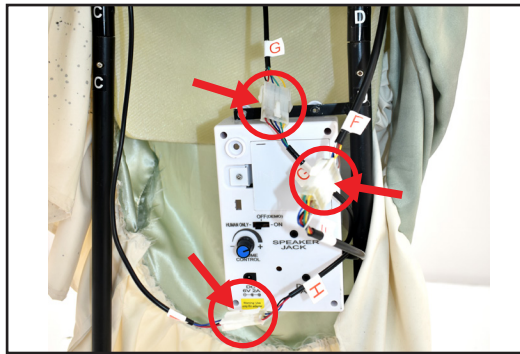


8. Connect the wires located on the CONTROL BOX.
(MATCH F to F - Head & Mouth Movement, LED Eyes)
(MATCH G to G - Back Bend Movement)
(MATCH H to H - Human Sensor)

OPERATING INSTRUCTIONS

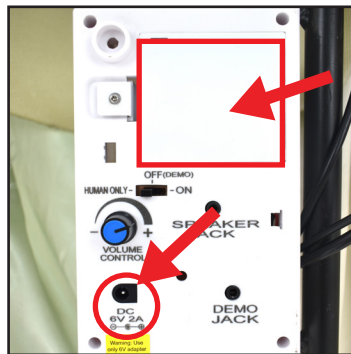

1. Plug in the 6V 2A DC ADAPTER (included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX and secure it by twisting it firmly. Do not overtighten.

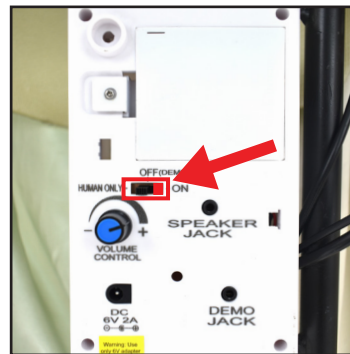


2. Turn the switch to the ON position to activate the item. Move in front of the item or make a loud sound (clap) to activate. Turn item OFF when not in use. Adjust volume control as needed.

OPERATING INSTRUCTIONS

OPTIONAL DEMO SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


1. Insert the cable from optional footpad into the jack labeled DEMO JACK on the CONTROL BOX.
 2. Place the switch on the CONTROL BOX into the OFF (DEMO) position to enable footpad activation.
 3. Step on footpad to activate the scary sequence!
- * Footpads are sold separately and can be purchased at www.tekkyaccessories.com

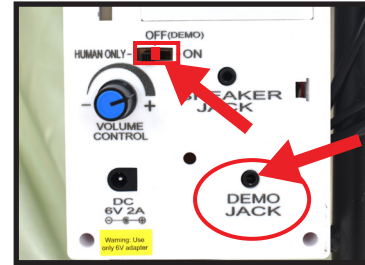


OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use external speaker knob to control volume level.

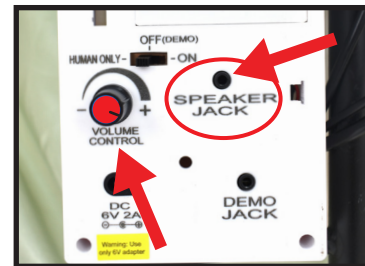

Battery Diagram

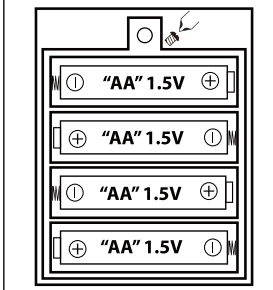

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.
Use only batteries recommended in the instructions.
Do not mix new and used batteries.
Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
Be mindful to insert batteries with the correct polarity (+/-) as indicated.
Remove all exhausted batteries.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the item before being charged.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short-circuited.
Always dispose of exhausted batteries properly.
Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.**

**WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go
to www.tekkydesign.com for assistance.



Visit us at tekkydesign.com

Requires 4AA batteries (not included) or 6V 2A DC adapter (included).

ALL NEW MATERIALS:
PLASTIC, FABRIC, METAL,
POLYPROPYLENE FOAM,
POLYURETHANE FOAM

Surface washable only.

Exorcism Emily Broken
Doll Animatronic™
is a trademark of Tekky.
Copyright © 2014 Tekky
All Rights Reserved.
FUN97027
MADE IN CHINA

**SMART PHONE SCAN
SETUP VIDEO**

