


JUMP SCARE SKULL AND TOMBSTONE ANIMATED DECORATION™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 4 MINUTES.

PARTS

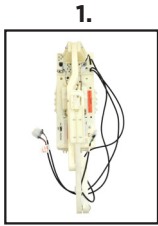

1. JUMPING MODULE

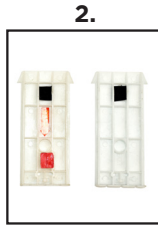

2. SIDE FEET WITH
FOOT REMOVAL
KEY (2)



3. BACK FOOT



4. FRONT FOOT
WITH TOMBSTONE




5. HEAD & BODY




6. 6V 2A
DC ADAPTER

ASSEMBLY

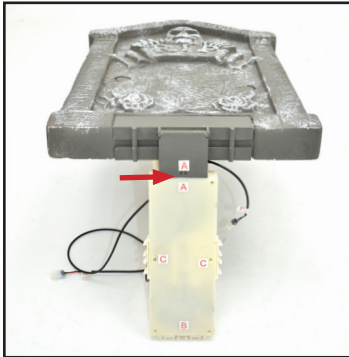


1. Insert FRONT FOOT WITH TOMBSTONE into the bottom of the JUMPING MODULE until it locks into place.

(Match A to A)

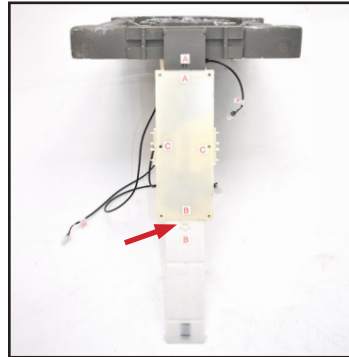


2. Insert BACK FOOT into the bottom of the JUMPING MODULE until it locks into place.

Note: When needed, add weight or tape down feet to increase stability.

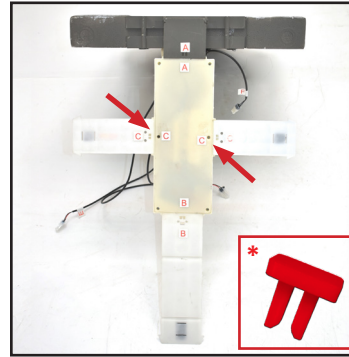


3. Insert SIDE FEET into bottom of JUMPING MODULE until they lock into place.

(Match C to C x2)
* Note: Press to make sure each FOOT is flush with the base. To remove FOOT, insert FOOT REMOVAL KEY into the holes on the bottom of the FOOT to release locks, then twist and pull.

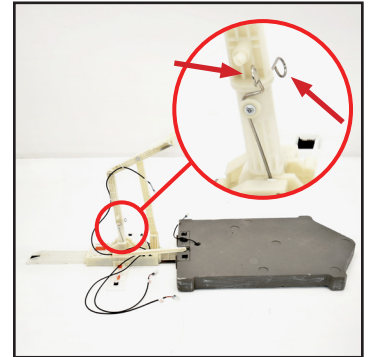


4. Lift JUMPING MODULE poles until they are vertical and attach springs as shown.

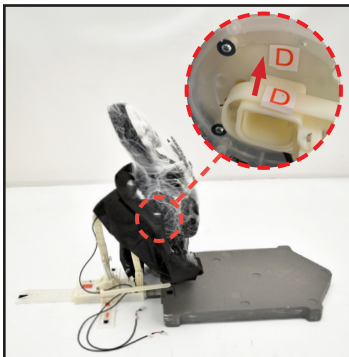

5. Attach HEAD & BODY to the JUMPING MODULE.


* REMOVAL: Push lever forward and lift up on HEAD & BODY to remove.

(Match D to D)

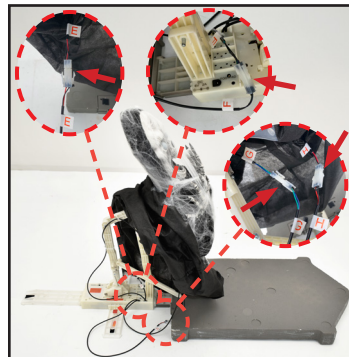

6. Connect the wires to the JUMPING MODULE.

(Match E to E - Left Hand LED)
(Match F to F - Motion Sensor)
(Match G to G - LED Eyes)
(Match H to H - Right Hand LED)

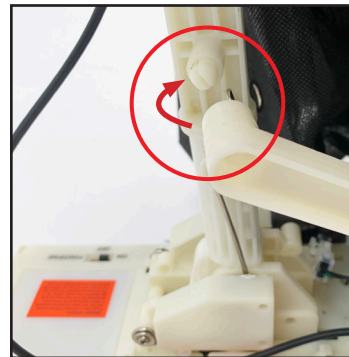


7. Snap lock pole from FRONT FOOT WITH TOMBSTONE to the JUMPING MODULE.

IMPORTANT: This is a one-time only assembly procedure. Once the tombstone pole is snap locked to the JUMPING MODULE, it cannot be removed or disassembled.




8. Hook and loop the fabric located on the lower back of the BODY to the BACK FOOT and SIDE FEET.

ASSEMBLY

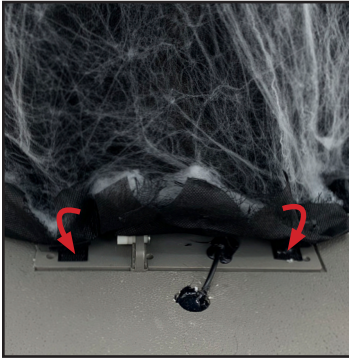


9. Hook and loop the fabric located on the lower front of the BODY to the back of the TOMBSTONE.

OPERATING INSTRUCTIONS

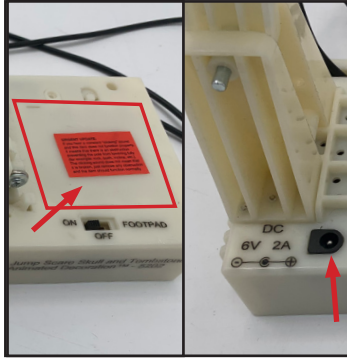

1. Insert 4 AA batteries (not included) into the battery compartment located on top of the JUMPING MODULE.

OR
Insert a 6V 2A DC ADAPTER (included) into the JUMPING MODULE.

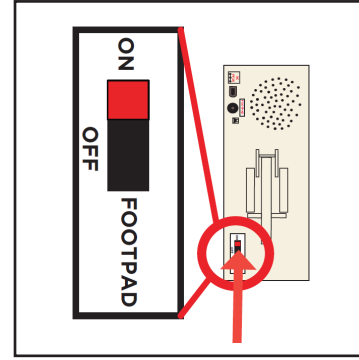

2. Turn the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate.

Turn the switch to the OFF position when not in use.


OPTIONAL FOOTPAD SETUP

OPTIONAL FOOTPAD SETUP


FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack located to the right of the power switch.
2. Place the power switch to the FOOTPAD position to enable demo activation.
3. Step on the footpad to activate the scary sequence!

* Footpads are sold separately and can be purchased at www.tekkyaccessories.com.

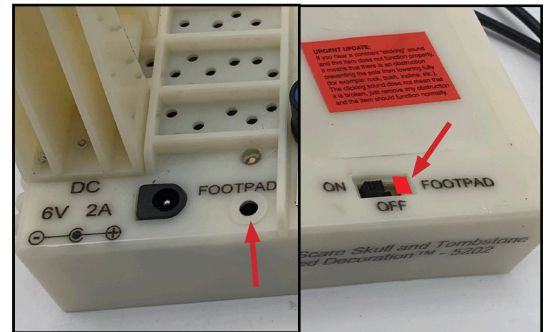

Battery Diagram

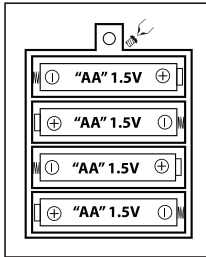

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING!
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION UNLESS ON METAL BASE.



Visit us at tekkydesign.com
Requires 4 AA batteries
(not included) or
6V 2A DC adapter (included).

ALL NEW MATERIAL ONLY:
METAL, PLASTIC, FABRIC,
POLYPROPYLENE FOAM,
POLYESTER WADDING.
Surface washable only.

Jump Scare Skull and Tombstone
Animated Decoration™
is a trademark of Tekky.
Copyright ©2014 Tekky.
All Rights Reserved.
FUN97032

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkydesign.com for assistance.



SMART PHONE SCAN
SETUP VIDEO

