

KILLER KLOWNS FROM OUTER SPACE™


ANIMATED RUDY™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 8 MINUTES.


PARTS

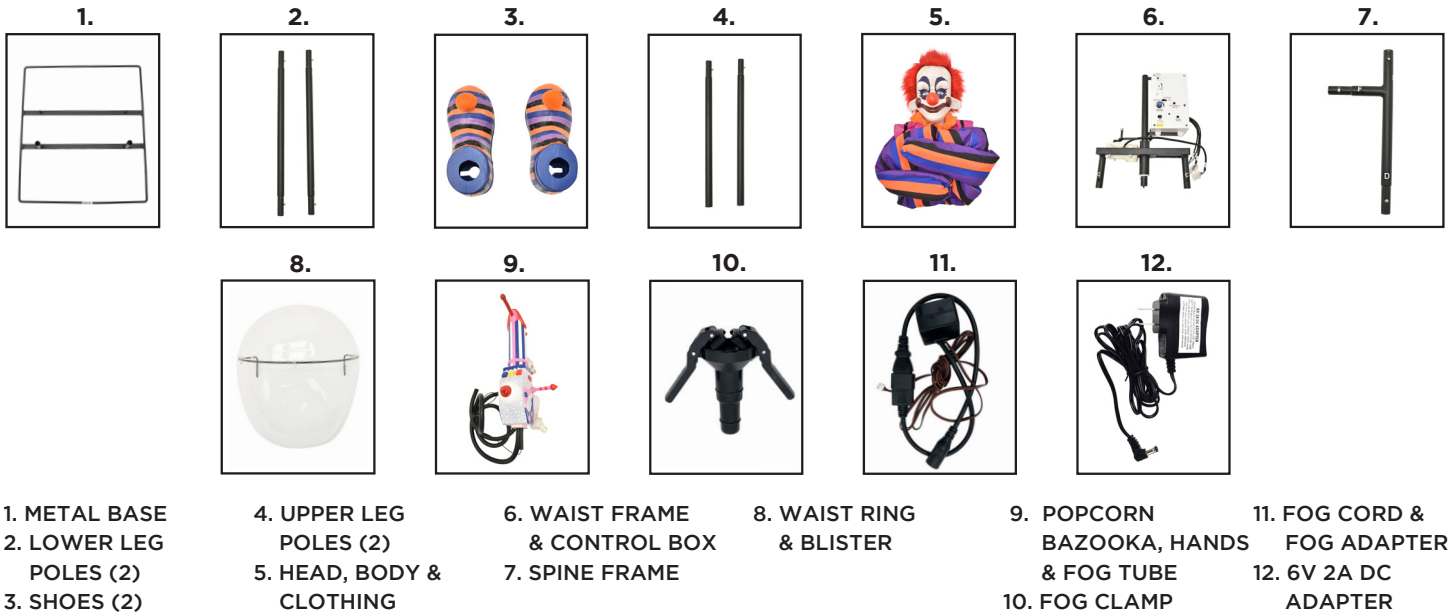


ASSEMBLY

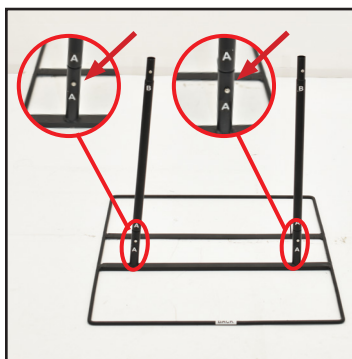

1. Insert and snap lock the LOWER LEG POLES into the METAL BASE.
(Match A to A x2)

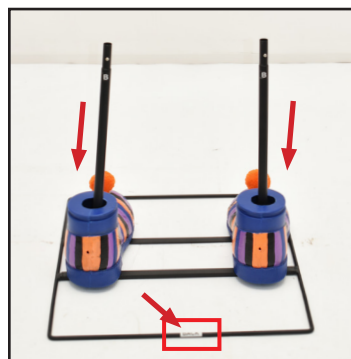


2. With the front of the SHOES facing away from the BACK label of the METAL BASE, slide the SHOES over the LOWER LEG POLES.

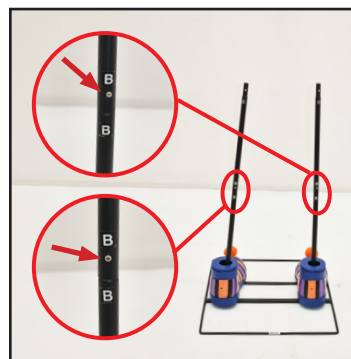

3. Insert and snap lock the UPPER LEG POLES into the LOWER LEG POLES.
(Match B to B x2)




4. With the back opening of the HEAD, BODY & CLOTHING facing the BACK label of the METAL BASE, slide the pant legs over the assembled UPPER and LOWER LEG POLES.

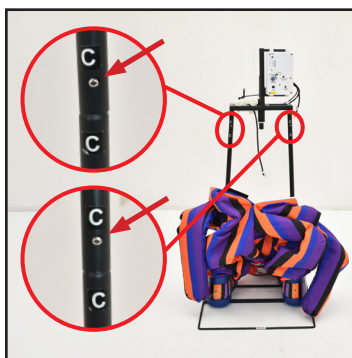

5. Insert and snap lock the WAIST FRAME & CONTROL BOX into the UPPER LEG POLES.
(Match C to C x2)



6. Insert and snap lock the SPINE FRAME into the WAIST FRAME & CONTROL BOX.
(Match D to D)

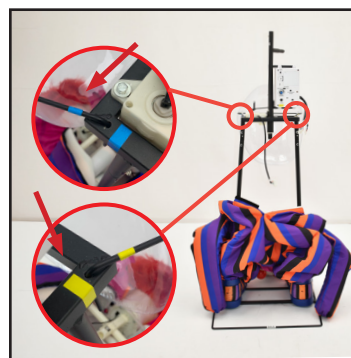

7. Insert the two metal posts located on the WAIST RING & BLISTER into the WAIST FRAME & CONTROL BOX.
(Match BLUE to BLUE)
(Match YELLOW to YELLOW)



8. Pull the HEAD, BODY & CLOTHING up over the assembled SPINE FRAME.
Insert and snap lock the HEAD, BODY & CLOTHING into the SPINE FRAME.
(Match E to E)

ASSEMBLY



9. Feed the POPCORN BAZOOKA'S FOG TUBE and wire through the CLOTHING'S chest opening. Pull the POPCORN BAZOOKA'S FOG TUBE out of the right pant leg to lay on the floor.

Through the same opening, insert and snap lock the POPCORN BAZOOKA into the SPINE FRAME. (Match F to F)



10. Insert and snap lock the left HAND located on the POPCORN BAZOOKA into the BODY'S left arm sleeve.

(Match G to G)

Adjust the left sleeve elastic over the ridge located on the left HAND'S wrist.



11. Insert and snap lock the right HAND located on the POPCORN BAZOOKA into the BODY'S right arm sleeve.

(Match H to H)

Adjust the right sleeve elastic over the ridge located on the right HAND'S wrist.



12. Through the back of the BODY, connect the wires located on the assembled item to the CONTROL BOX wires. (Match I to I - BODY Motion) (Match J to J - Human Sensor) (Match K to K - LED Eyes) (Match L to L - POPCORN BAZOOKA LED)



13. Hook and loop the back of the CLOTHING shut.

FOG MACHINE SETUP

Please follow steps 1 through 13 on the assembly instructions before beginning FOG MACHINE SETUP:


1. Your fog machine (400 or 1000 watt) can be used in conjunction with Killer Klowns From Outer Space™ Animated Rudy™.
2. Do not use with any other fog machine.
3. FOG MACHINE IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.
4. Manufacturer does not guarantee the performance of the fog machine.
5. Make sure to use the supplied fog machine components when hooking up to the fog machine, or damage could occur.
6. MAKE SURE THE KILLER KLOWNS FROM OUTER SPACE™ ANIMATED RUDY™ IS SET TO THE OFF POSITION AND THAT YOUR FOG MACHINE IS TURNED OFF WHEN NOT IN USE.

FOG CLAMP - PATENT: <https://tekkydesign.com/pages/terms-conditions.php>

FOG MACHINE ASSEMBLY


1. FOG HOSE will slide onto the FOG CLAMP and secure in place. (See Illustration A)

Depress the lever arms of the FOG CLAMP and attach to the fog machine nozzle. (See Illustration B)

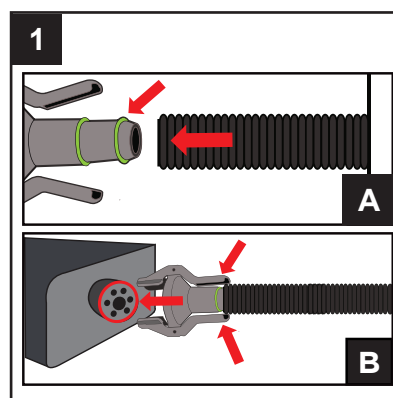

2. Plug the FOG CORD into your fog machine. If the FOG CORD does not fit, see illustration 2a.

- 2a. Plug the FOG CORD into the FOG CORD ADAPTER. Plug FOG CORD ADAPTER into your fog machine.

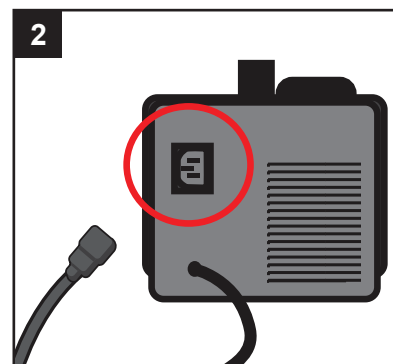


FOG MACHINE ASSEMBLY

3. Plug the other end of the FOG CORD into the jack labeled M on the CONTROL BOX. (Match M to M)


Make sure your fog machine is heated up properly, turn your fog machine ON, and then turn the Killer Klowns From Outer Space™ Animated Rudy™ switch to the ON position.

Make a loud sound (clap) or move in front of the item to activate.

If no fog appears, press the Relay Switch on the CONTROL BOX.

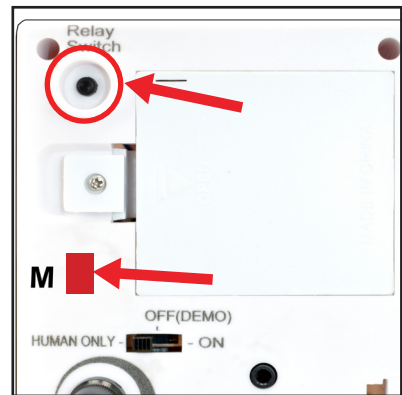


OPERATING INSTRUCTIONS

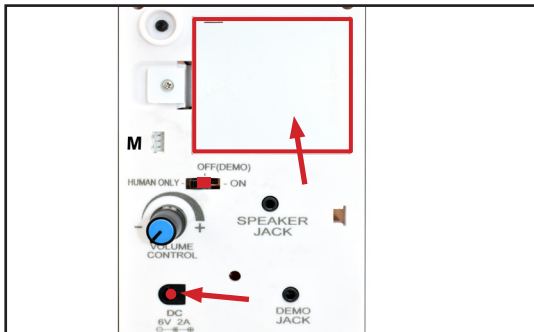

1. Insert 4 AA batteries (not included) into the battery compartment located on the CONTROL BOX.

OR

Insert a 6V 2A DC ADAPTER (included) into the CONTROL BOX.

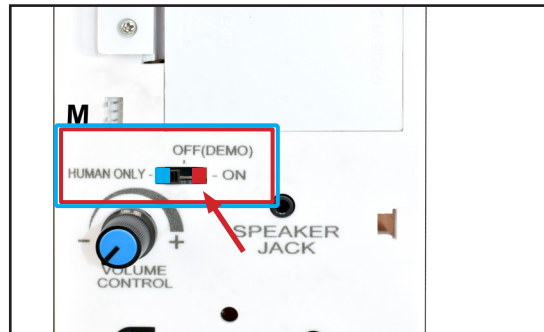

2. Move the switch to the ON position (marked in red) and make a loud sound (clap), or move in front of the item to activate.

OR

Move the switch to the HUMAN ONLY position (marked in blue) to activate with motion only. Move the switch to the OFF(DEMO) position when not in use.

OPTIONAL FOOTPAD SETUP

OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from the optional footpad into the jack labeled DEMO JACK located on the CONTROL BOX.
2. Place the power switch to the OFF(DEMO) position to enable demo activation.
3. Step on the footpad to activate the scary sequence!

* Footpads are sold separately and can be purchased at www.tekkyaccessories.com.



OPTIONAL EXTERNAL SPEAKER SETUP


OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug the speaker cord into the jack labeled SPEAKER JACK on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use external speaker knob to control the volume level.



Battery Diagram

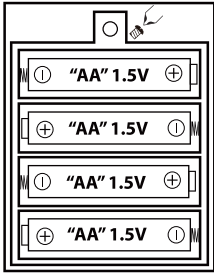

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING!
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION UNLESS ON METAL BASE.



Visit us at tekkydesign.com
Requires 4 AA batteries (not included) or 6V 2A DC adapter (included).

MODEL # 61099
FUN97018

ALL NEW MATERIAL ONLY:
POLYPROPYLENE FOAM,
POLYURETHANE FOAM.
SURFACE WASHABLE ONLY.

KILLER KLOWNS FROM OUTER SPACE™ & © 1988 Orion Pictures Corporation. © 2025 Metro-Goldwyn-Mayer Studios Inc. All Rights Reserved.

Manufactured by:
Tekky, Orland Park, IL
60467 USA
Tekkydesign.com

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.



**SMART PHONE SCAN
SETUP VIDEO**

