

RIPSAW ANIMATRONIC™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

ESTIMATED ASSEMBLY TIME: 4 MINUTES.

PARTS



1. METAL BASE



2. SHOES



3. PANTS WITH LEG POLES & TORSO RING



4. HEAD, BODY & SHIRT WITH CONTROL BOX



5. HANDS & RIPSAW




6. APRON WITH HOOKS



7. 6V 2A DC ADAPTER

ASSEMBLY

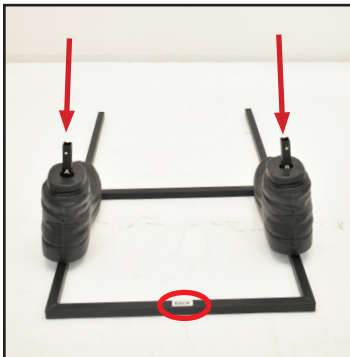

1. With the back of the SHOES facing the BACK label of the METAL BASE, slide the SHOES over the METAL BASE'S two metal poles.



2. Insert and snap lock the PANTS WITH LEG POLES & TORSO RING into the METAL BASE.

(Match A to A)
(Match B to B)




3. Slide the TORSO RING'S metal posts into the waist frame of the PANTS WITH LEG POLES.

(Match BLUE to BLUE)
(Match YELLOW to YELLOW)




4. Insert and snap lock the HEAD, BODY & SHIRT WITH CONTROL BOX into the assembled PANTS WITH LEG POLES & TORSO RING.

(Match C to C)

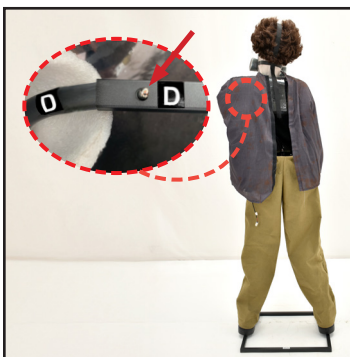

5. Through the back of the SHIRT, insert the left arm pole into the shoulder frame of the HEAD, BODY & SHIRT WITH CONTROL BOX.

(Match D to D)

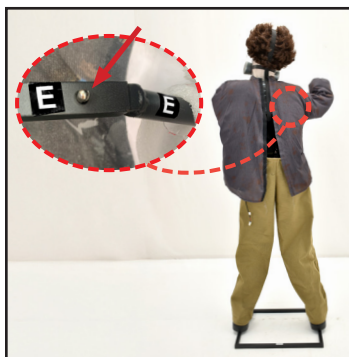

6. Through the back of the SHIRT, insert the right arm pole into the shoulder frame of the HEAD, BODY & SHIRT WITH CONTROL BOX.

(Match E to E)



7. Turn the item around to face the front.



8. Insert and snap lock the left HAND of the HANDS & RIPSAW to the HEAD, BODY & SHIRT WITH CONTROL BOX. (Match F to F) Feed the wires located on the left HAND up the left sleeve. Secure the left elastic sleeve over the plastic ridge of the left HAND.

ASSEMBLY



9. Insert and snap lock the right HAND of the HANDS & RIPSAW to the HEAD, BODY & SHIRT WITH CONTROL BOX.

(Match G to G)

Secure the right elastic sleeve over the plastic ridge of the right HAND.



10. Through the back of the SHIRT, connect all of the wires to the CONTROL BOX wires.
(Match H to H - RIPSAW Motion & LED)
(Match I to I - Waist Motion)
(Match J to J - Human Sensor)
(Match K to K - HEAD LED)
Hook and loop the back of the SHIRT shut.




11. Hook and loop the APRON WITH HOOKS around the neck and waist of the assembled HEAD, BODY & SHIRT WITH CONTROL BOX.

Tie the APRON straps around the waist of the assembled HEAD, BODY & SHIRT WITH CONTROL BOX.




12. Adjust the appearance as shown in the diagram.

OPERATING INSTRUCTIONS

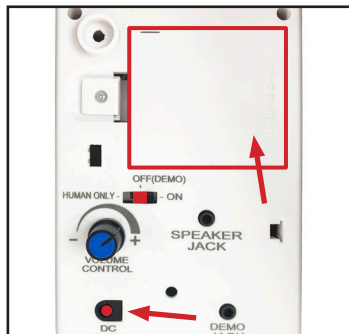

1. Insert 4 AA batteries (not included) into the battery compartment located on the CONTROL BOX.
OR
Insert a 6V 2A DC ADAPTER (included) into the CONTROL BOX.

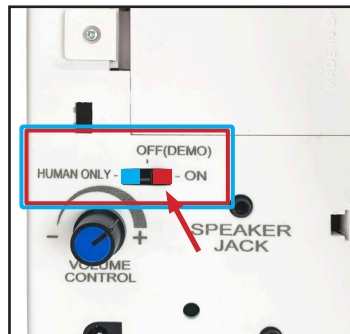

2. Move the switch to the ON position (marked in red) and make a loud sound (clap), or move in front of the item to activate.
OR
Move the switch to the HUMAN ONLY position (marked in blue) to activate with motion only. Move the switch to the OFF(DEMO) position when not in use.

OPTIONAL FOOTPAD SETUP

OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from the optional footpad into the jack labeled DEMO JACK located on the CONTROL BOX.
2. Place the power switch to the OFF(DEMO) position to enable demo activation.
3. Step on the footpad to activate the scary sequence!

* Footpads are sold separately and can be purchased at www.tekkyaccessories.com.




OPTIONAL EXTERNAL SPEAKER SETUP


OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug the speaker cord into the jack labeled SPEAKER JACK on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use external speaker knob to control the volume level.

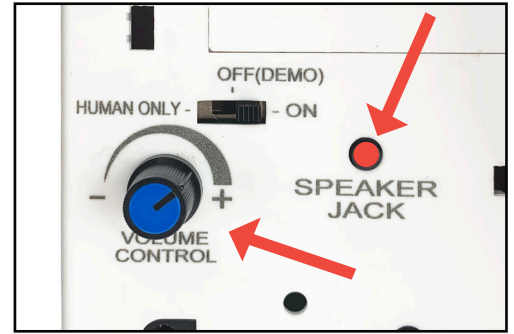

Battery Diagram

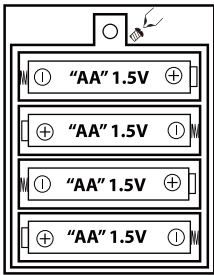

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.

Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated.

Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the item before being charged.

Non-rechargeable batteries are not to be recharged.

The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING!
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION UNLESS ON METAL BASE.



Visit us at tekkydesign.com
Requires 4 AA batteries
(not included) or
6V 2A DC adapter (included).

ALL NEW MATERIAL ONLY:
METAL, PLASTIC, FABRIC,
POLYPROPYLENE FOAM,
POLYURETHANE FOAM.
Surface washable only.

Ripsaw Animatronic™
is a trademark of Tekky.
Copyright ©2025 Tekky.
All Rights Reserved.
FUN97183
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkydesign.com for assistance.



SMART PHONE SCAN
SETUP VIDEO

